

# Thank you for purchasing your Chapter 8 kit from Victory Design Ltd

## Getting started

Please read the following instructions thoroughly before starting to apply your kit.

Before commencement of application, please ensure all panels are received and checked off against the original plan as mistakes cannot be refunded.

## Application tools you will need for the fitting process:

**Washing equipment**  
To wash and dry the vehicle in preparation for fitting.

**Avery Surface Cleaner**  
Use with a clean, lint free cloth to aid in the degreasing process, ensuring any residue is removed.

**Masking tape**  
Used to position the parts of the kit on the vehicle before fitting begins.

**Plastic applicator**  
For applying firm strokes to the vinyl surface, ensuring sufficient bond to the vehicle and for removing any air pockets that may appear within the face film.

**Snap off knives**  
To remove any air bubbles and any excess backing paper before applying to the vehicle.



## Surface Preparation

- Check that the vehicle you are applying to is free of any rust, grease or flaking paint.
- The air temperature and vehicle temperature should be above 10°C for best fitting results.
- Wash the area of the vehicle you are fitting to thoroughly with soapy water and dry thoroughly, removing all traces of water using a lint free cloth.
- Use Avery Surface Cleaner to degrease the area ready for fitting to begin.
- For best results the surface area must be clean and free from waxes, grease, polishes, silicones, rust, hand and finger prints and any flaking and peeling paint.
- Remove any vehicle manufacturer and model badges from the vehicle - do not cut the graphic panels to fit around them. This will ensure the best results from the material and will not compromise the material manufacturers warranty in any way. Replace badges when fitting is complete.


### Step 1

Position all parts of the kit onto your vehicle using masking tape.

Ensure all the chevrons are lined up correctly right across the area of the vehicle you are fitting to.

Ensure all parts are present and correct.


Each panel is already hinged together and is ready for fitting (standard kit).

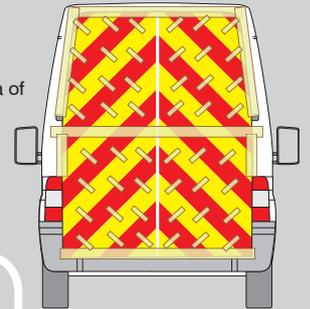

### Step 2

Starting from the centre of the vehicle working outwards to the edge of the vehicle, hinge back the first panel and remove the backing paper.

Ensure you keep the film held tightly away from the surface of the vehicle ready for application.

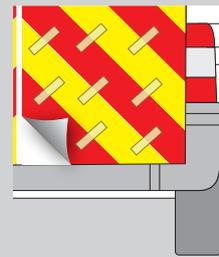


We only recommend dry application for all of the kits that we provide.

### Step 3

Using the plastic applicator squeegee the film down to the surface of the vehicle using firm horizontal strokes overlapping at the edges of each panel to ensure maximum adhesion.

During this process always ensure the graphic is kept tight to avoid trapping air and creasing. Do not allow the graphic to touch the surface of the vehicle with the backing removed in advance of the applicator.

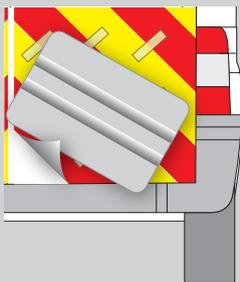

### Step 4

Repeat this process for each individual panel, continuing to work from the centre of the vehicle outwards and removing masking of each hinged individual panel as you go.

### Step 5

Once you have completed this process for all panels in all areas of the vehicle ensure all the graphic is adhered overall, especially on the edges.


Then using a snap off knife, remove any bubbles that are present in the face film. Squeegee the whole graphic a final time to be sure of maximum adhesion to the vehicle.



### Step 6

Door lozenges apply to a flat area of the edge of all open doors on the vehicle.

Once positioned remove backing paper then using firm horizontal strokes squeegee to the surface of the door edges.

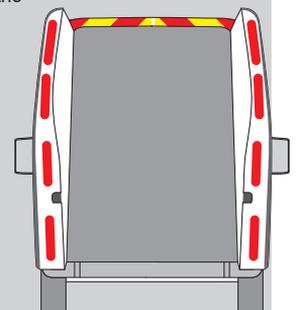

### Step 7

Using a lint free cloth wipe down the applied kit to remove any dirt particles that may have built up during the fitting process.

Your vehicle is now ready for the road